

Automatic Door Systems



SW-2


Swing Door

使用說明

OPERATION INSTRUCTION



<http://www.kth-automaticdoor.com/>
e-mail : kth@kthtw.com

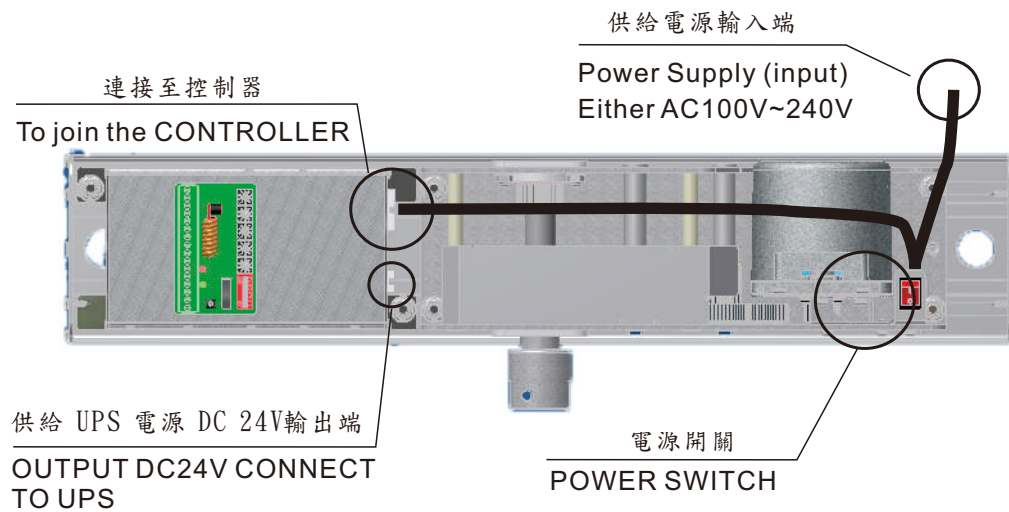

警告


請確認感應器所標示之電壓是否與供給電源相同，若與供給電源電壓不同時，則感應器需另行加裝變壓裝置否則感應器極易燒毀，連接完畢後，請再確認一次。

Warning

Please confirm WHETHER the SENSOR VOLTAGE is the same as the power supply. If different between them, need to add the TRANSFORMER, otherwise the SENSOR would be burned.

本公司另有以下各類自動門配備, 請洽本公司各經銷商
Our company has the following series of automatic door, please contact with our distributors/representations.


圓型門 Round type door

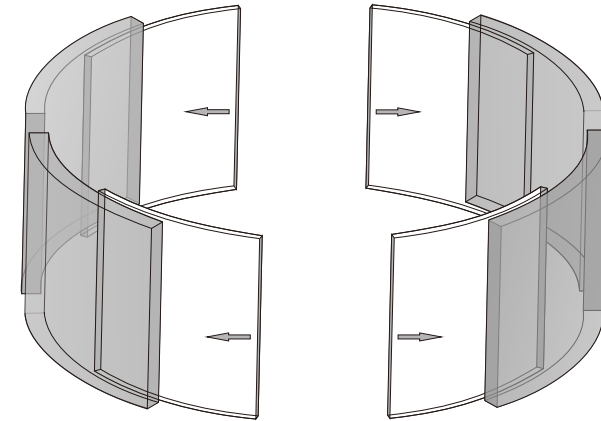

按裝方式請參考圓型門按裝說明

Installation: Please in accordance with the instruction of Round Type Door.

弧型門 Curved Type Door

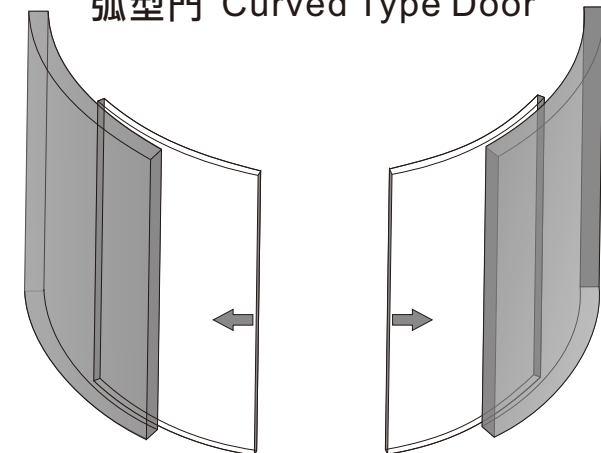


按裝方式請參考弧型門按裝說明

Installation: Please in accordance with the instruction of Curved Type Door.

四扇走雙向門

Telescopic 4-winged Sliding Doors.

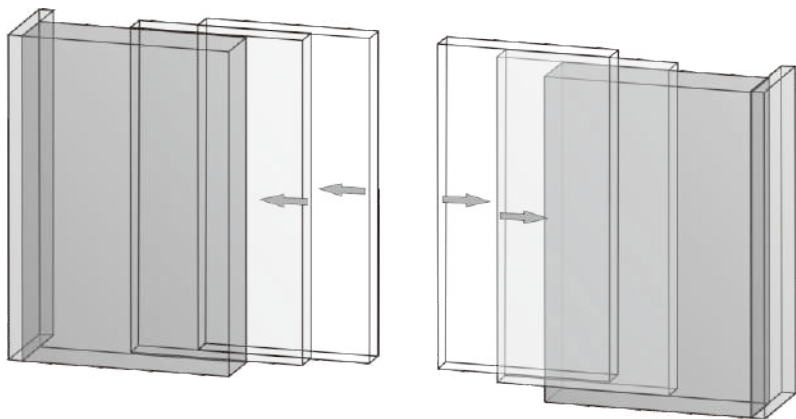


按裝方式請參考四扇走雙向門按裝說明

Installation: Please in accordance with the instruction of Telescopic 4-winged Sliding Doors.

雙扇走單向門

Telescopic 2-winged Sliding Doors.

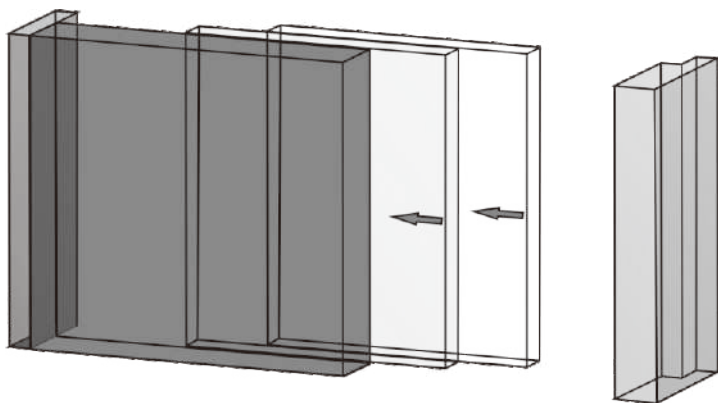


按裝方式請參考雙扇走單向門按裝說明

Installation: Please in accordance with the instruction of Telescopic 2-winged Sliding Doors.

多門互控主從有電鎖


Double Doors with Interlock, Electronic lock, Master/Slave Function

第一組門 1st of Double Door

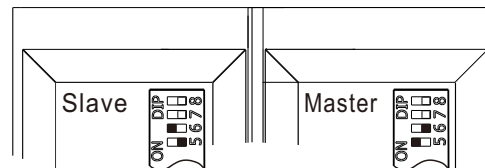


請設定先關門的為主機 (5 ON、6 OFF) , 後關門的為副機 (5 OFF、6 ON)。

Please set the door which closes first to master (5 NO, 6 OFF) then set the second to close to slave (5 OFF, 6 ON).

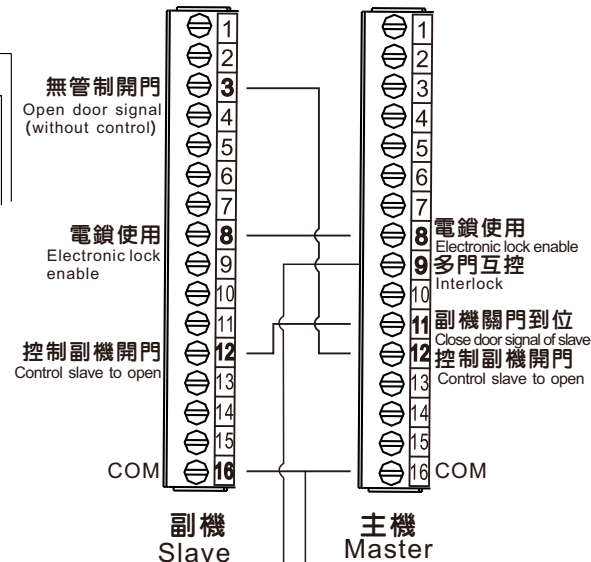


第二組門 2nd of Double Door

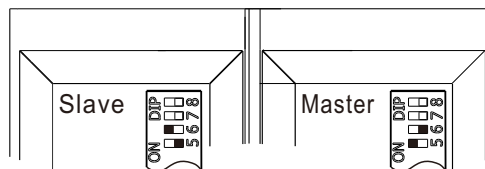


請設定先關門的為主機 (5 ON、6 OFF) , 後關門的為副機 (5 OFF、6 ON)。

Please set the door which closes first to master (5 NO, 6 OFF) then set the second to close to slave (5 OFF, 6 ON).

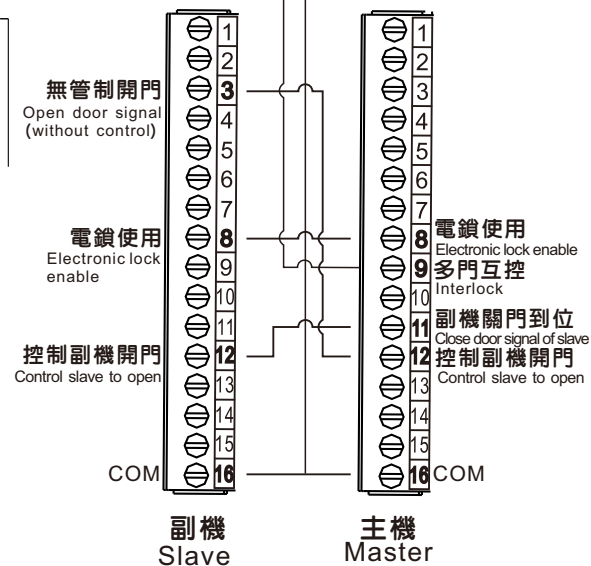



雙門示意圖 Double Door (I)

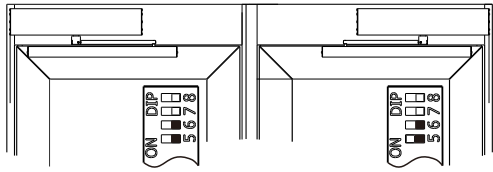


無管制開門
Open door signal
(without control)

請設定二台主機指撥開關的5、6狀態皆為OFF。

Please set all door (5 OFF, 6 OFF).

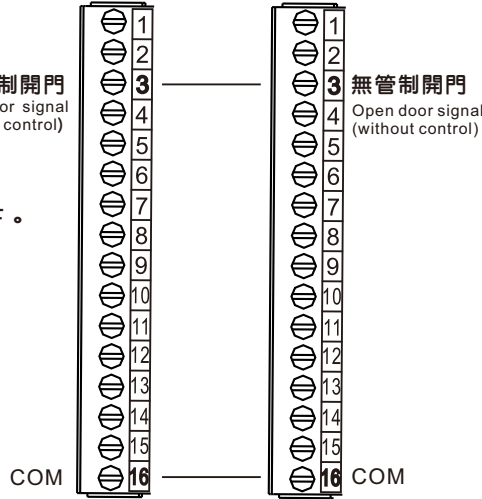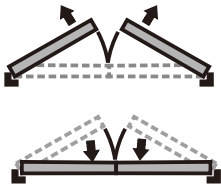

主從有電鎖雙門示意圖 Double Door (II) With Electronic Lock and Master/Slave Function

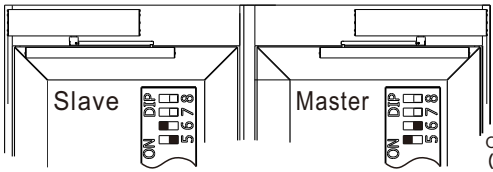



無管制開門
Open door signal
(without control)

請設定先關門的為主機(5 ON、6 OFF)，
後關門的為副機(5 OFF、6 ON)

Please set the door which closes first
to master (5 ON, 6 OFF) then set the
second to close to slave (5 OFF, 6 ON).

電鎖使用
Electronic lock
enable

控制副機開門
Control slave to open

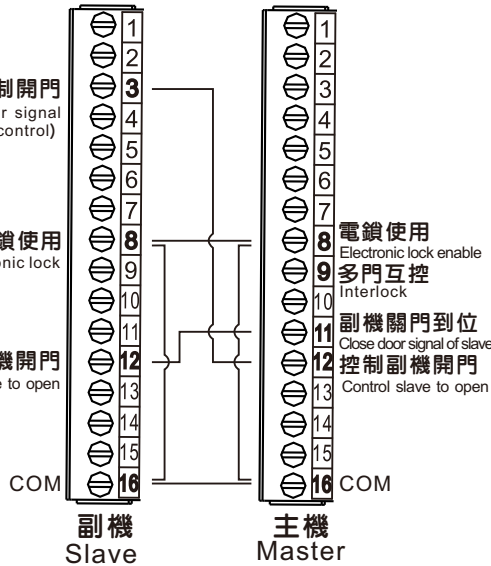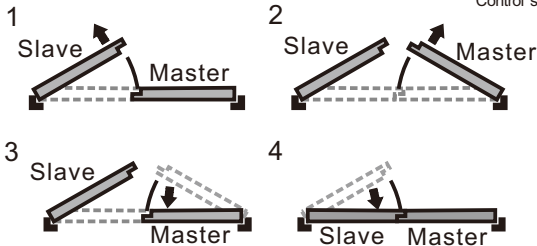


電鎖使用
Electronic lock enable
8
多門互控
Interlock
9
副機關門到位
Close door signal of slave
11
控制副機開門
Control slave to open
12

副機
Slave

主機
Master

1. 產品規格	TECHNICAL SPECIFICATION.....	P1
2. 門機組各部件說明	DESCRIPTION OF OPERATOR.....	P2
3. 門機組尺寸圖	OPERATOR (SECTION).....	P3
4. 開門幅度設定說明	DISTANCE SETTING.....	P4
5. 外推式按裝示意圖	(OUTWARD OPENING)PUSH ARM ASSEMBLY MOUNTING... P5	
6. 外推式部件說明	(OUTWARD OPENING)PUSH ARM ASSEMBLY ILLUSTRATION.. P6	
7. 內拉式按裝示意圖	(INWARD OPENING)PULL ARM ASSEMBLY MOUNTING.... P7	
8. 內拉式部件說明	(INWARD OPENING)PULL ARM ASSEMBLY ILLUSTRATION... P8	
9. 各旋鈕功能說明	ADJUST BOARD INSTRUCTION.....	P9
10. 信號連接說明	CONNECTION TO TERMINAL BLOCK.....	P10
11. 雙門/主從關係	DOUBLE DOOR AND MASTER/SLAVE FUNCTION.....	P11
12. 多門互控(兩道雙門)	INTERLOCK, ELECTRONIC LOCK, MASTER/SLAVE FUNCTION.....	P12
13. 電器連接	CONNECTION.....	P13

型號 MODEL	SW - 2	
種類 TYPE	外推式 (Outward)	內拉式 (Inward)
門扇重量/寬度 DOOR WEIGHT & WIDTH	最大值：● Max. 最小值：● Min.	
馬達 MOTOR	DC24V 120W 直流無刷馬達 DC24V 120W BRUSHLESS DC MOTOR	
控制器 CONTROL	微電腦化處理機控制器 USER-FRIENDLY MICRO-CONTROLLER	
消耗電量 POWER CONSUMPTION	120W	
電源電壓 VOLTAGE	AC100V~240V	
環境溫度 ENVIRONMENTAL TEMPERATURE	-20°C~+50°C	
噪音量 VOLUME	最大 55 分貝 55 decibel(max.)	
開啟速度 SPEED of OPENING 90 DEGREE	3秒~8秒 / 90° 3~8 sec / 90°	
開啟時間 STARTING TIME	可調 0 秒至 20 秒 0~20 sec. (Regulable)	
傳動要件 TRANSMISSION IMPORTANT CONDITION	外推式連桿組 Outward Arm assembly	內拉式滑動槽 Inward Arm assembly
開門幅度 OPENING DOOR RANGE	自行設定 / 90° (出廠值) 120° Max. / 90 (default)	
PFC 功率因素 POWER EFFICIENCY	0.95 (AC100V全載時) 0.95 (In full load)	
手推開啟力量 TRACTION FORCE	2.5 kg	

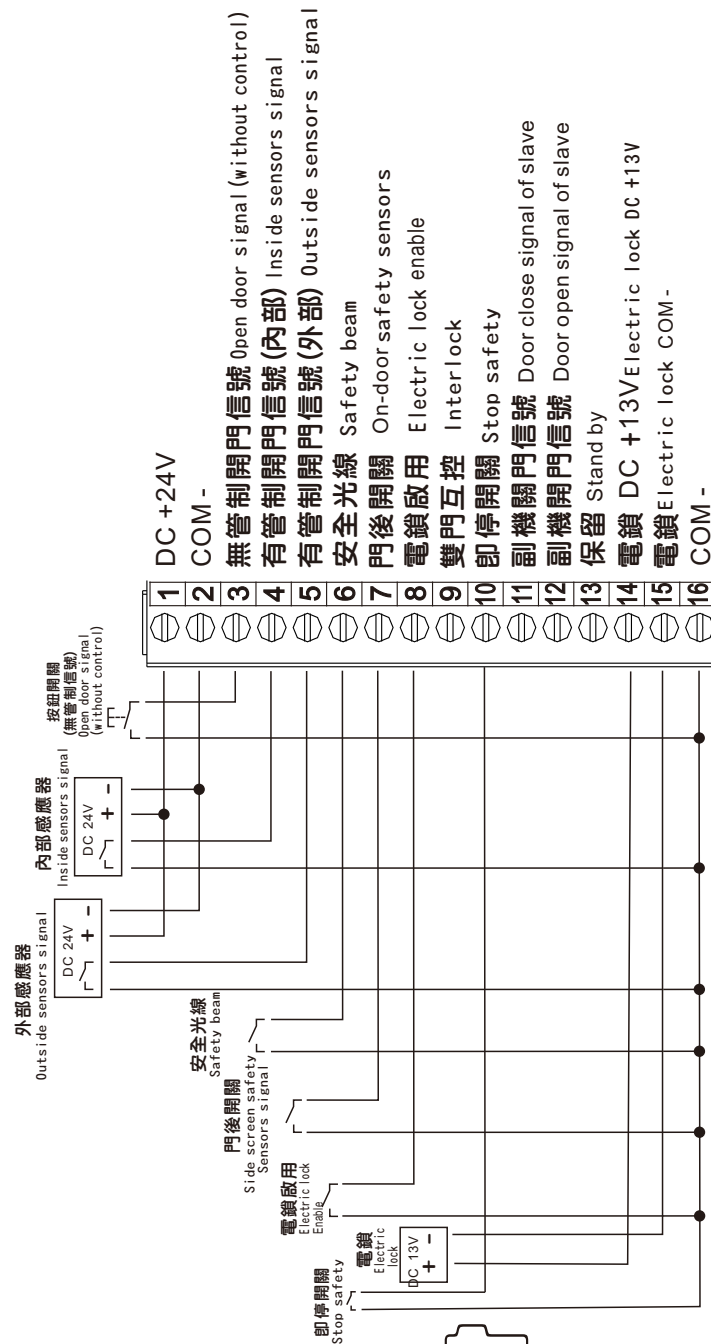


下電鎖時保全系統功能自行啟動: 停電後再復電後, 門扇先執行關門動作

When connect to electronic lock, the reverse switch will be connected too: after power resumes, the Door-leaf closes the door first.

黃 Yellow ● 開機測試： Opening Testing

綠 Green ● 燈亮表示信號已輸入 Signal input

紅 Red ● 電源指示： 燈亮表示電源已接通 Power on

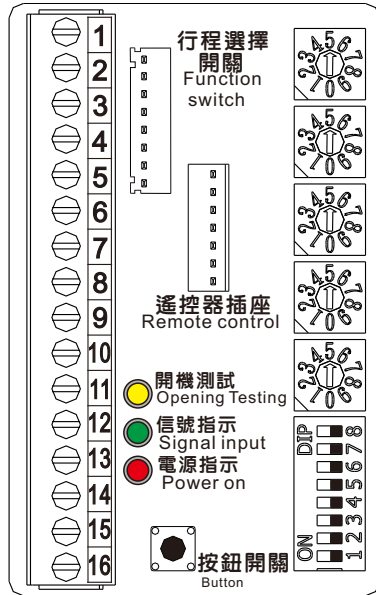

開門速度 Opening speed

關門速度 Closing speed

開門慢速 Opening slow speed

關門慢速 Closing slow speed


開門暫停時間 Opening hold time

指撥開關功能敘述 (Fingered switch functions)

8	OFF	關閉防風壓 Wind Pressure Resistance
	ON	開啟防風壓 Wind Pressure Resistance
7	OFF	關門電鎖接點NC Fail-safe (lock, NC.)
	ON	關門電鎖接點NO Fail-secure (lock, NO.)①
6	OFF	不設定為副機 Set to slave-OFF
	ON	設定為副機 Set to slave-ON
5	OFF	不設定為主機 Set to Master- OFF
	ON	設定為主機 Set to Master- ON
4	OFF	無定向功能 Directional Function- OFF
	ON	有定向功能 Directional Function- ON
3	OFF	煞車力量-大 Brake power-Large
	ON	煞車力量-小 Brake power-Little
2	OFF	煞車功能-有(門扇50kg以上) Brake power-ON (over 50 KG.)
	ON	煞車功能-無(門扇50kg以下) Brake power-OFF (under 50 KG.)
1	OFF	開門方向-左開 Opening direction-Left
	ON	開門方向-右開 Opening direction-Right


Note: ① Power to unlock (only continue 5 seconds)

 指撥開關 (DIP switch functions)




* 注意：
若為單一門扇時，指撥開關5與6必須設定為 Off 狀態。


* ATTENTION:
When only use 1unit operator,
the pin 5 and pin 6 must set to off state.

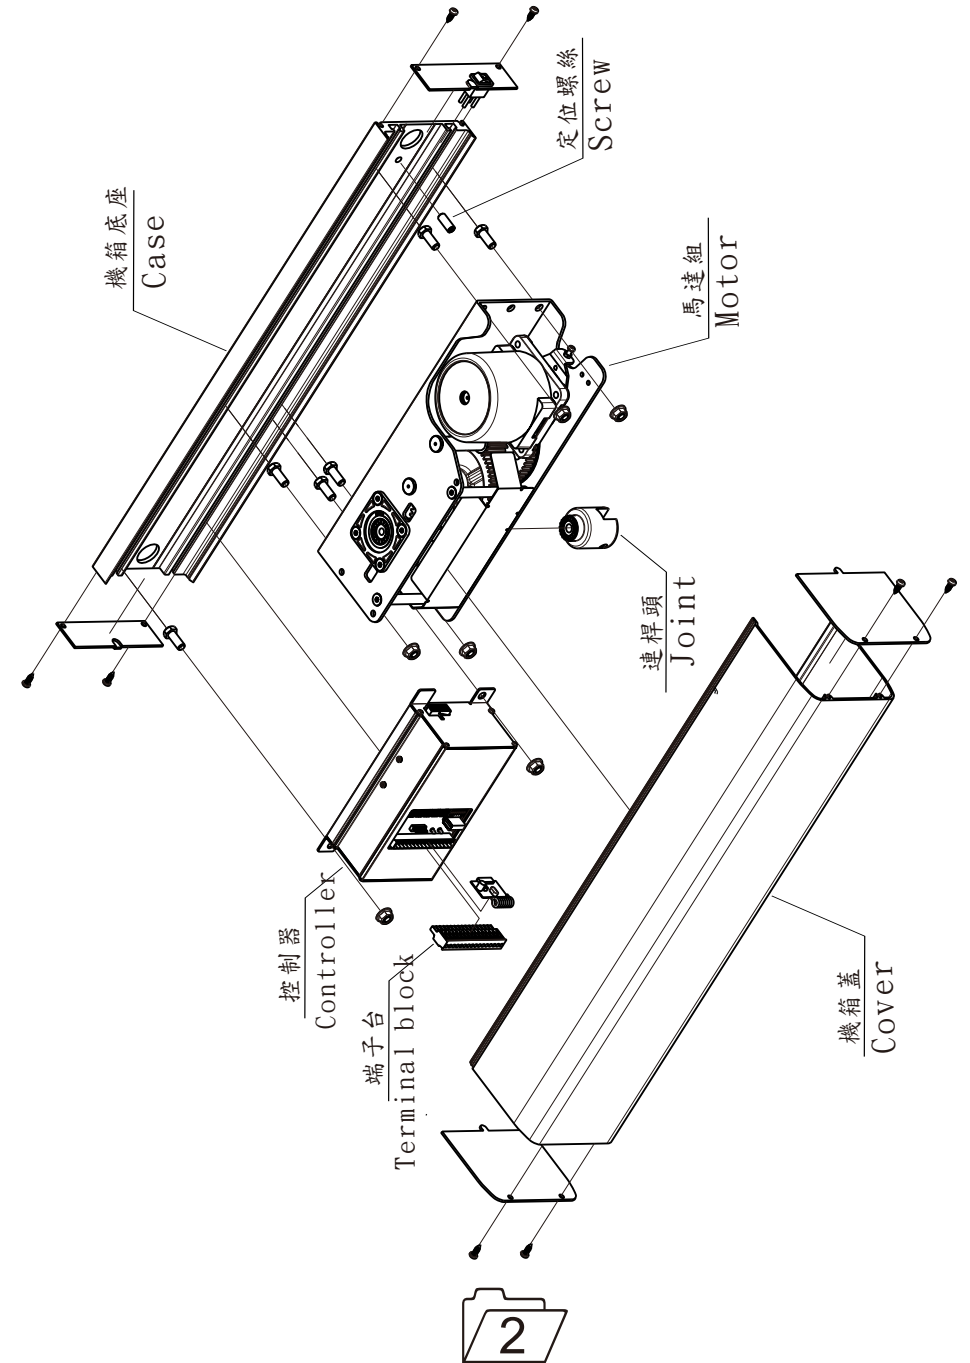

正視圖
Front View

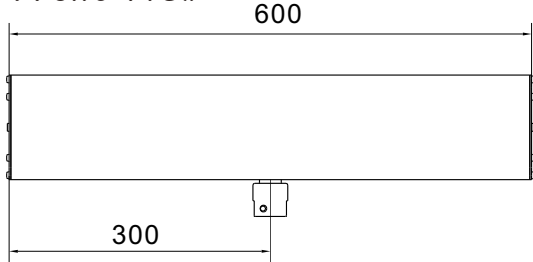


側視圖
Side View

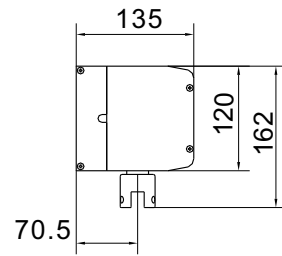

底座尺寸圖



Base Size

596

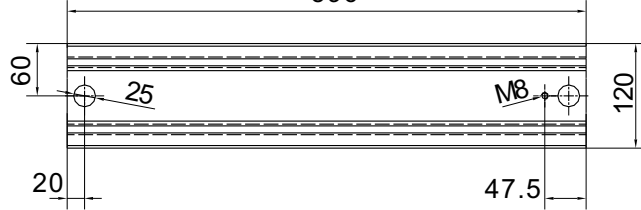

每組門機皆可搭配內拉或外推式配件


Every set of operator can use the Inward / Outward Arm assembly.

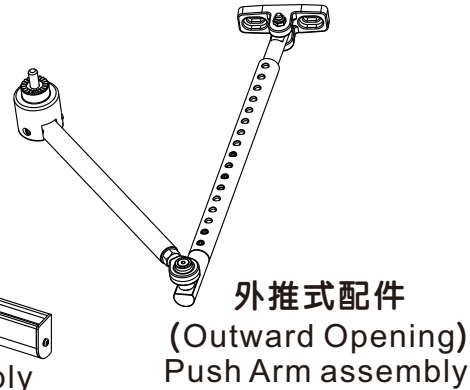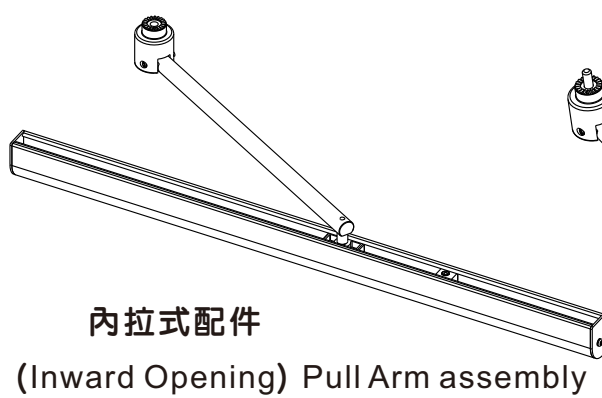

內拉式
按裝示意圖
Operator

控制器
Controller

馬達
Motor

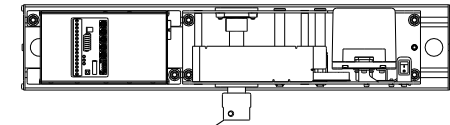


連桿頭
Joint

註：無論是外推式和內拉式，左側門或右側門馬達永遠是安裝在右側。


Motor has to be mounted the right side of the controller, no matter it's Outward/Inward/ Left Open/Right Open.

內拉式滑槽
示意圖


Inward Opening Pull Arm assembly

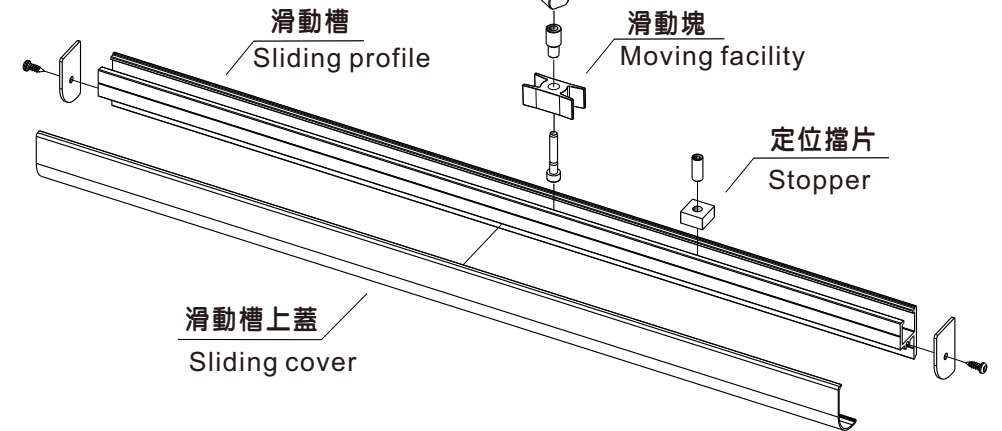


內拉式(左側)
Left Open

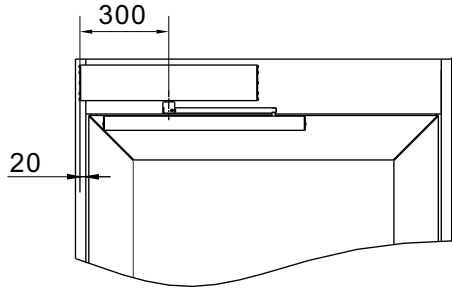


內拉式(右側)
Right Open

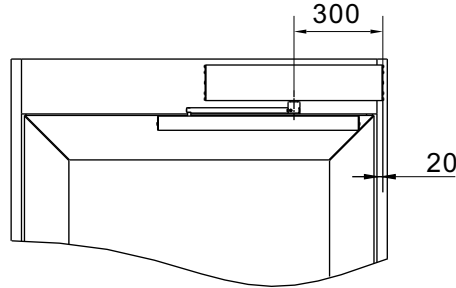


內拉式滑動槽按裝尺寸圖
The position of mounting

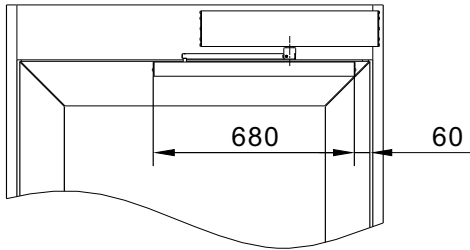


內拉式門機按裝尺寸圖
Mounting (Side View)

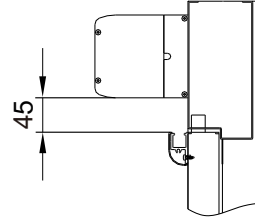

內拉式左側開門方向
Mounting (eg. for Left Open, Top View)

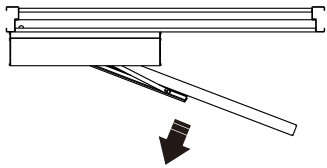

內拉式右側開門方向
Mounting (eg. for Right Open, Top View)

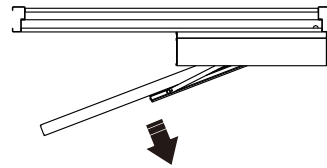


行程設定區
(可自由設定)
Set freely

行程最大值
Max. 120°

行程最小值
Min. 35°


利用門擋器來設定
開門行程

When the yellow light on,
please set the distance of
opening range by stoppers.

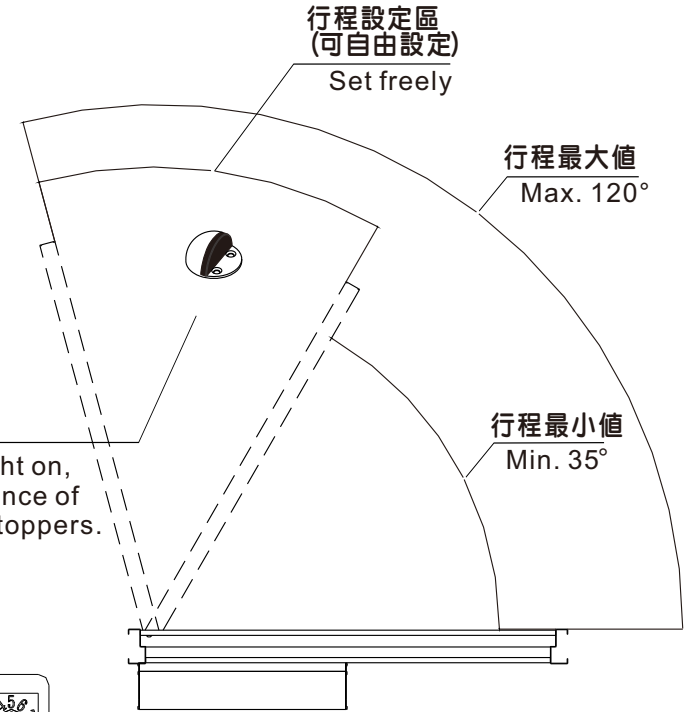


電源開啟後即進入設定行程模式。


When power on the auto start opening range
setting mode.

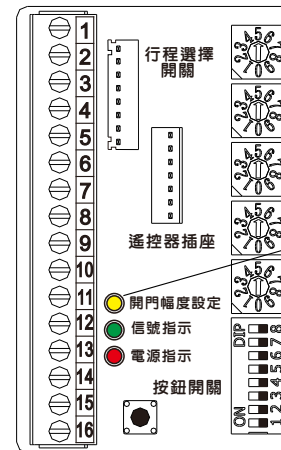


外推式(左側)
Left Open

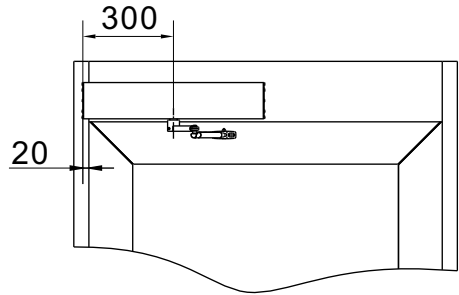


外推式(右側)
Right Open

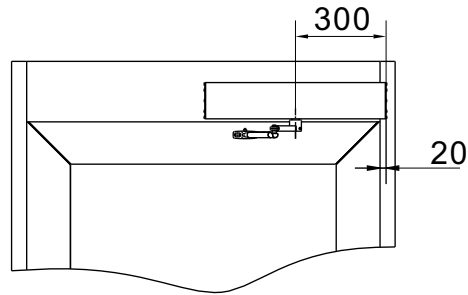


外推式推桿按裝尺寸圖
The position of mounting

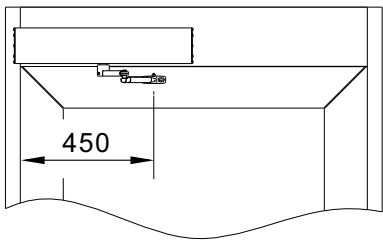


外推式門機按裝尺寸圖
Mounting (Side View)

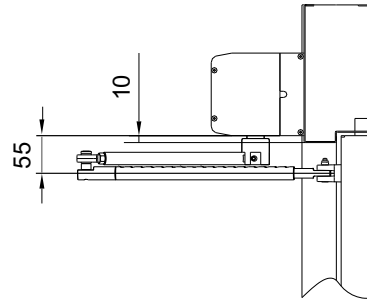


外推式開門方向(左側開門)
Mounting (eg. for left Open, Top View)

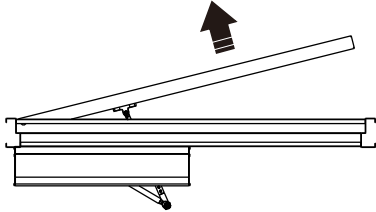

外推式開門方向(右側開門)
Mounting (eg. for Right Open, Top View)

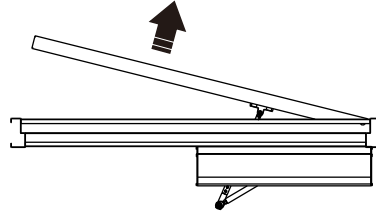

外推式
按裝示意圖
Operator

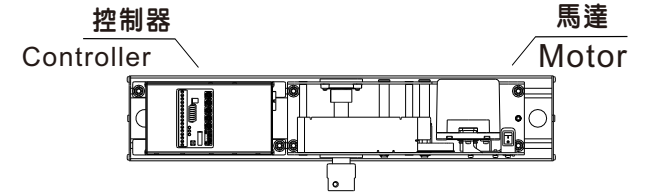

註：無論是外推式和內拉式，左側門或右側門
馬達永遠是按裝在右側。

Motor has to be mounted the right side
of the controller, no matter it's
Outward/Inward/ Left Open/Right Open.

外推式連桿
示意圖
Inward Opening
Push Arm assembly

