

Automatic Door Systems



H8-W3

使用說明


OPERATION INSTRUCTION



<http://www.kth-automaticdoor.com/>
e-mail : kth@kthtw.com

本公司另有以下各類自動門配備, 請洽本公司各經銷商
Our company has the following series of automatic door, please contact with our distributors/representations.


圓型門 Round type door

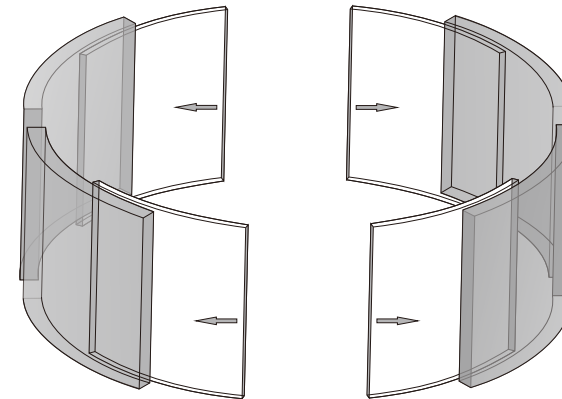

按裝方式請參考圓型門按裝說明

Installation: Please in accordance with the instruction of Round Type Door.

弧形門 Curved type door



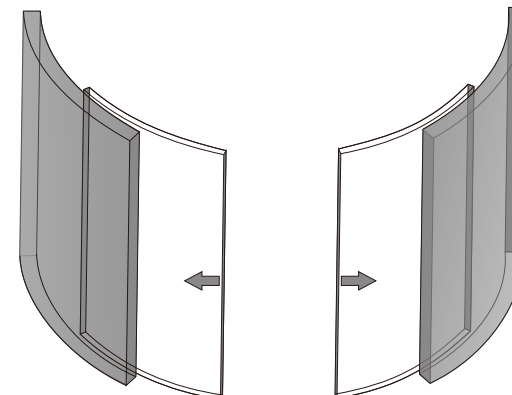


按裝方式請參考弧型門按裝說明

Installation: Please in accordance with the instruction of Curved Type Door.

1. 套件規格	COMPONENTS SPECIFICATION.....	P1
2. 產品規格	TECHNICAL SPECIFICATION.....	P2
3. 機械箱剖面圖	SECTIONAL DRAWING.....	P3
4. 機械箱高度圖	INSTALLATION DRAWING.....	P4
5. 按裝流程圖	INSTALL PROCEDURE.....	P5
6. 尾輪座按裝	INSTALL THE BELT ROLLER.....	P6
7. 吊滑輪位置圖	THE POSITION OF THE HANGING TWIN-WHEEL....	P7
8. 皮帶按裝	INSTALL THE RACK BELT.....	P8
9. 門扇調整	ADJUST THE DOOR-LEAF.....	P9
10. 電氣連接	CONNECTION.....	P10
11. 信號連接	OUTPUT CONNECT.....	P11
12. 測試及調整	TEST AND ADJUST.....	P13
13. 各調節旋鈕功能說明	ADJUSTMENT.....	P14
14. 故障檢查流程	BROKEN CHECKING.....	P16
15. 故障排除(繁體)		P17
16. TROUBLESHOOTING		P18
17. 故障排除(圖示)		P19


狀況三 門扇運行有雜音
 The Door-Leaf sends out abnormal noise in operating.

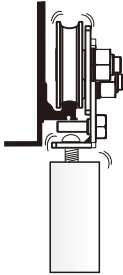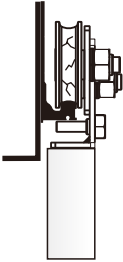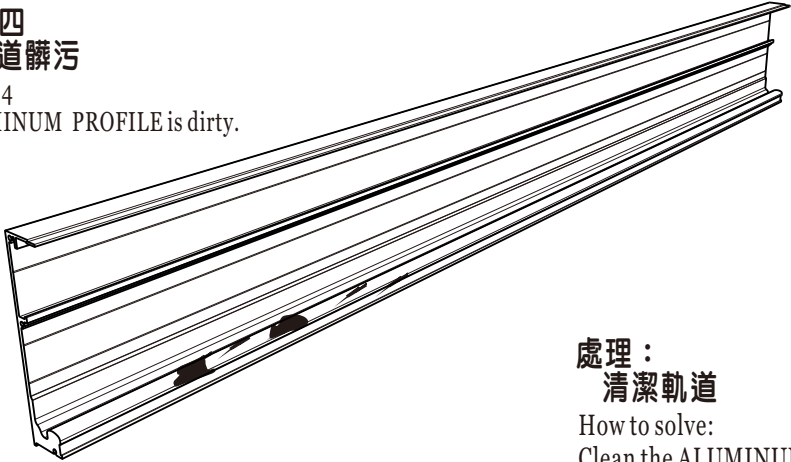原因一 吊輪螺絲鬆動 Cause 1 The SCREW of the HANGING TWIN-WHEEL is loose.  處理： 重新將吊輪螺絲旋緊 How to solve: Refasten the SCREW of HANGING TWIN-WHEEL.	原因二 吊輪損壞 Cause 2 HANGING TWIN-WHEEL is broken.  處理： 更換吊輪 How to solve: Replace a new one HANGING TWIN-WHEEL.	原因三 吊輪髒污 Cause 3 HANGING TWIN-WHEEL is dirty.  處理： 清潔吊輪 How to solve: Clean the HANGING TWIN-WHEEL.
原因四 軌道髒污 Cause 4 ALUMINUM PROFILE is dirty.  處理： 清潔軌道 How to solve: Clean the ALUMINUM PROFILE.		

狀況二 門扇運行不順暢 Door-Leaf isn't smooth in operating.

原因一
吊輪安裝未垂直

Cause 1
HANGING TWIN-WHEEL is not at vertical position.

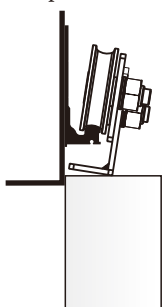


處理：
重新調整吊輪

How to solve:
Readjust the
HANGING TWIN-WHEEL.

原因二
門扇與地軌有磨擦或地軌
髒污

Cause 2
1. Door touches Ground Rail.
2. Ground Rail is dirty.

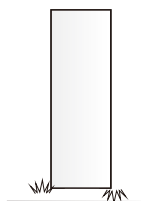


處理：
1. 調整門扇高度
2. 清理地軌的髒污

How to solve:
1. Readjust the distance between Door
and Ground Rail.
2. Clean up the Ground Rail.

原因三
軌道未垂直

Cause 3
ALUMINUM PROFILE is not vertical.

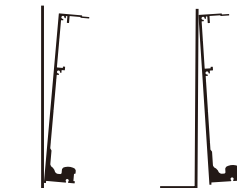


處理：
重新調整軌道的垂直位置

How to solve:
Readjust the vertical position of the
ALUMINUM PROFILE.

原因四
軌道未水平

Cause 4
ALUMINUM PROFILE is not at vertical position.

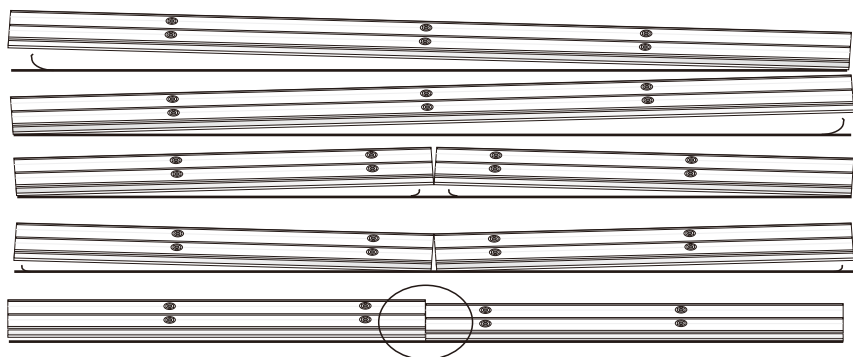


處理：
重新調整軌道的水平位置


How to solve:
Readjust the level position of the ALUMINUM PROFILE.



微電腦控制器
MICRO-CONTROLLER

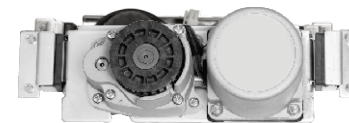

直流無刷馬達及減速齒輪組
BRUSHLESS DC MOTOR

 

齒型皮帶
RACK BELT



門扇固定螺絲 (12個 三扇走單)
DOOR SCREWS (12 pcs 3-winged)



主被動板固定螺絲(4個三扇走單)
SCREWS of ACTIVE (4 pcs 3-winged)



小阻輪 (12個雙扇走單)
BLOCK (12 pcs 3-winged)



 
吊滑輪固定擋片(4個三扇走單)
STOPER (4 pcs 3-winged)




墊片(12個三扇走單)
WASHER (12 pcs 3-winged)



集線器
COMBINED
TERMINAL BLOCK



尾輪座 A
BELT ROLLER A

 


尾輪座一組 B
BELT ROLLER B



主動板
ACTIVE BRACE



 上主動板
UPPER ACTIVE
BRACE



下主動板
LOWER
ACTIVE BRACE



外層門扇主動板
OUTSIDE door-leaf
ACTIVE BRACE



皮帶夾 (4個三扇走單)
BELT FIXER(3 pcs 3-winged)




內層門扇吊滑輪組(右側)
Inside door-leaf
HANGING TWIN-WHEEL(right side)



內層門扇吊滑輪組(左側)
Inside door-leaf
HANGING TWIN-WHEEL(left side)




中層門扇吊滑輪組 (1組 三扇走單)
MIDDLE door-leaf
HANGING TWIN-WHEEL (1set 3-winged)

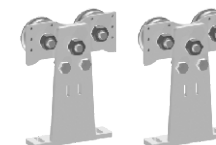

皮帶中央支撐板
BELT BRACE



 紅外線感應器(選配)
SENSORS (OPTIONAL DEVICE)



門扇吊板 (6個 三扇走單)
Hanging Brace (6pcs 3-winged)



外層門扇吊滑輪組 (1組 三扇走單)
Outside door-leaf
HANGING TWIN-WHEEL (1set 3-winged)




束帶 5 個
CABLE TIE-5 PCS

型號 TYPE	H8-W3
種類 MODEL	三扇走單向式 Telescopic 3-winged
門扇重量 DOOR WEIGHT	300 kg X3扇(door)
門扇寬度 DOOR WIDTH	DW=500mm~2500mm
按裝方式 INSTALL WAY	表面按裝 Surface install
馬達 MOTOR	DC24V 120W 直流無刷馬達 DC24V 120W BRUSHLESS DC MOTOR
控制器 CONTROL	微電腦化處理機控制器 STANDARD MICRO-CONTROLLER
消耗電量 POWER CONSUMPTION	120 W
電源電壓 VOLTAGE	AC100V~240V皆可(either AC100V~240V)
環境溫度 ENVIRONMENTAL TEMPERATURE	-20°C~+50°C
噪音量 VOLUME	最大 60 分貝 60decibel(max.)
開啟速度 STARTING SPEED	500mm/秒(second)
開啟時間 STARTING TIMES	可調 0 秒至 64 秒 0~64 sec. (regulable)
傳動要件 TRANSMISSION IMPORTANT CONDITION	齒形皮帶 S8M RACK BELT
開門幅度 OPENING DOOR RANGE	全開/半開 可調整距離 FULL/HALF-OPEN (regulable)
PFC 功率因素 POWER EFFICIENCY	0.95(AC100V全載時/in AC100V Full load)
手推開啟力量 TRACTION FORCE	"當停電時，門可以用手拉開" WHEN POWER OFF THE DOOR CAN BE OPENED BY MANUAL

狀況一 門扇無法開啟或關閉 Door can't be opened or closed.

原因一
門扇上方與橫樑接觸

Cause 1
Above the Door-Leaf touched with the crossbeam.

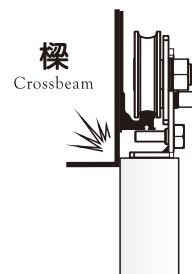

處理：
調整門扇與橫樑間隙

How to solve:
Adjustment the interval between the Door-Leaf height and Crossbeam.

原因二
門扇與地軌接觸

Cause 2
The Door-Leaf touched with the Ground Guide Rail.




處理：
調整門扇高度

How to solve:
Adjust the Door-Leaf height.

原因三
門扇脫軌

 Cause 3
Door-Leaf derails the ALUMINUM PROFILE.



處理：
重新將門扇置入軌道

How to solve:
Put the Door-Leaf into the ALUMINUM PROFILE again.

原因四
門扇未垂直

Cause 4
Door-leaf is not vertical.




處理：
調整地軌位置

How to solve:
Adjust the Ground Guide Rail/Wheel position.

原因五
感應器故障或未接線至集線器


Cause 5
SENSOR is broken or disconnects to the COMBINED TERMINAL BLOCK.

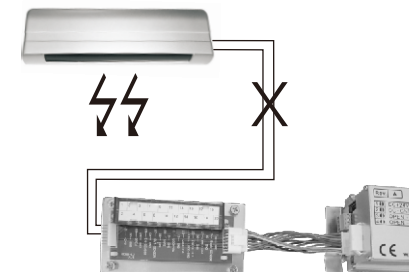


處理：
1. 若感應器故障則更換新的感應器
2. 檢查感應器是否連接至集線器


How to solve:
1.If SENSOR is broken please change a new one.
2.Check SENSOR whether it connects to the COMBINED TERMINAL BLOCK.

PROBLEMS	REASONABLE	CHECK	HOW TO SOLVE
DOOR CAN'T BE MOVED.	1.No power.	Broken circuit.	Check the broken circuit position.
		The Power Switch is not opened.	Open the POWER SWITCH.
	2.The door is locked.	Door is locked and no movement action.	Open the DOOR LOCK.
	3.The sensor is broken.	Signal light is WORKING.	Check the MICRO-CONTROLLER.
		Signal light is OUT OF WORKING.	Check the CIRCUIT OF SENSOR or change a new one SENSOR.
SPEED	1.Speed is too slow.	Check the Speed at KNOB of MICRO-CONTROLLER.	Adjust the Speed of Open/Closed Door.
	2.Door runs into the obstructor, then cause the Door moving slow.	Installation problem or dirty.	Reinstall or clean the ALUMINUM PROFILE.
	3.Door is difficult to move.	Turn off the power.Use hand to move the Door, besides, check the Ground Guide Rail whether it is dirty.	Clean the Ground Guide Rail.
		Check the HANGING TWIN-WHEEL whether it is broken.	Change a new one.
		Check the Door Bolt in the door bottom whether it is loosen.	Fix the Door Bolt.
		Check whether the Ground Wheel is broken.	Change a new Ground wheel.
DOOR CAN'T FULL OPEN.	In the Half-Open way.	Check the Knob/Switch.	Turn on to Full Open.
DOOR CAN'T CLOSE.	1.In the Full-Open way.	The SENSOR keeps working.	Check wiring or change a new SENSOR.
	2.The Door opens suddenly while it is moving to close .	The SENSOR probably is installed with something wrong.	Adjust the SENSOR or change a new one.

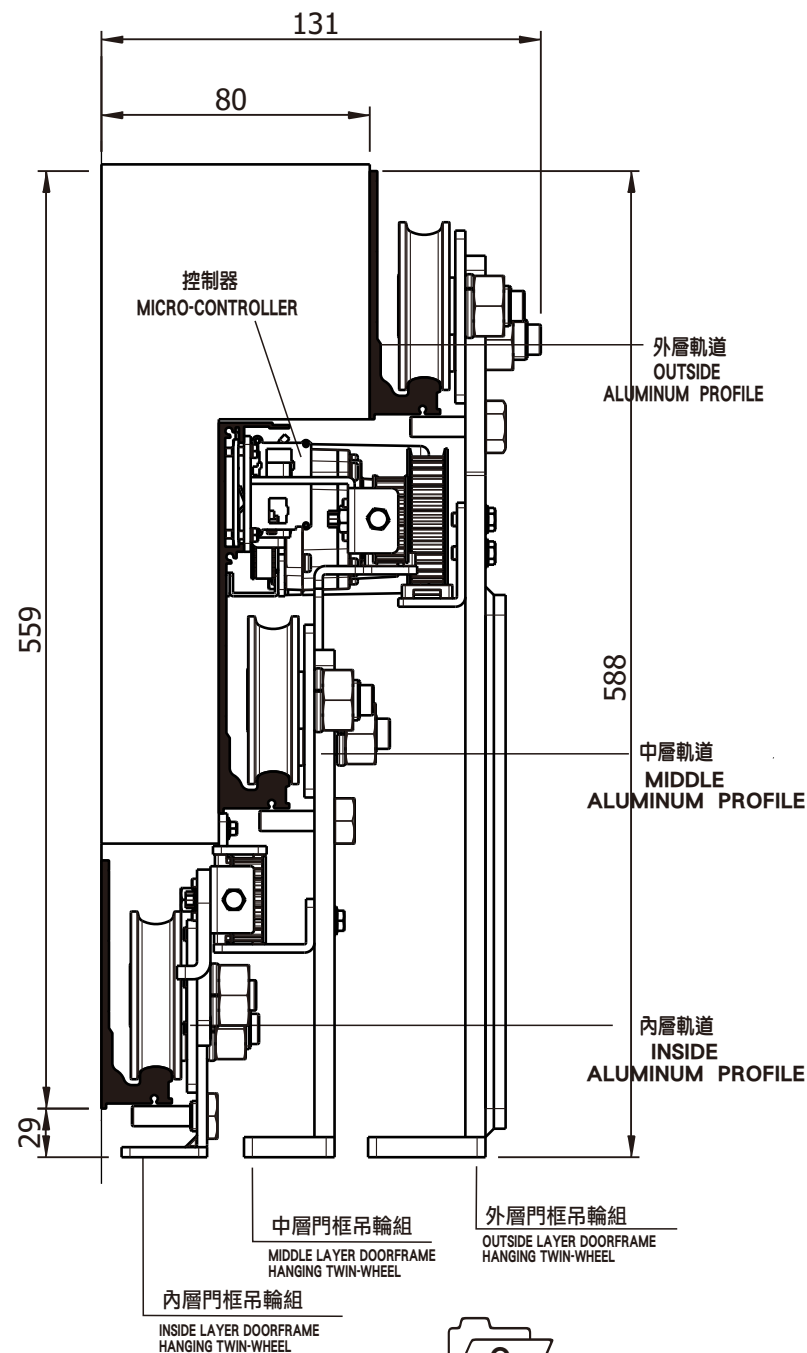

17

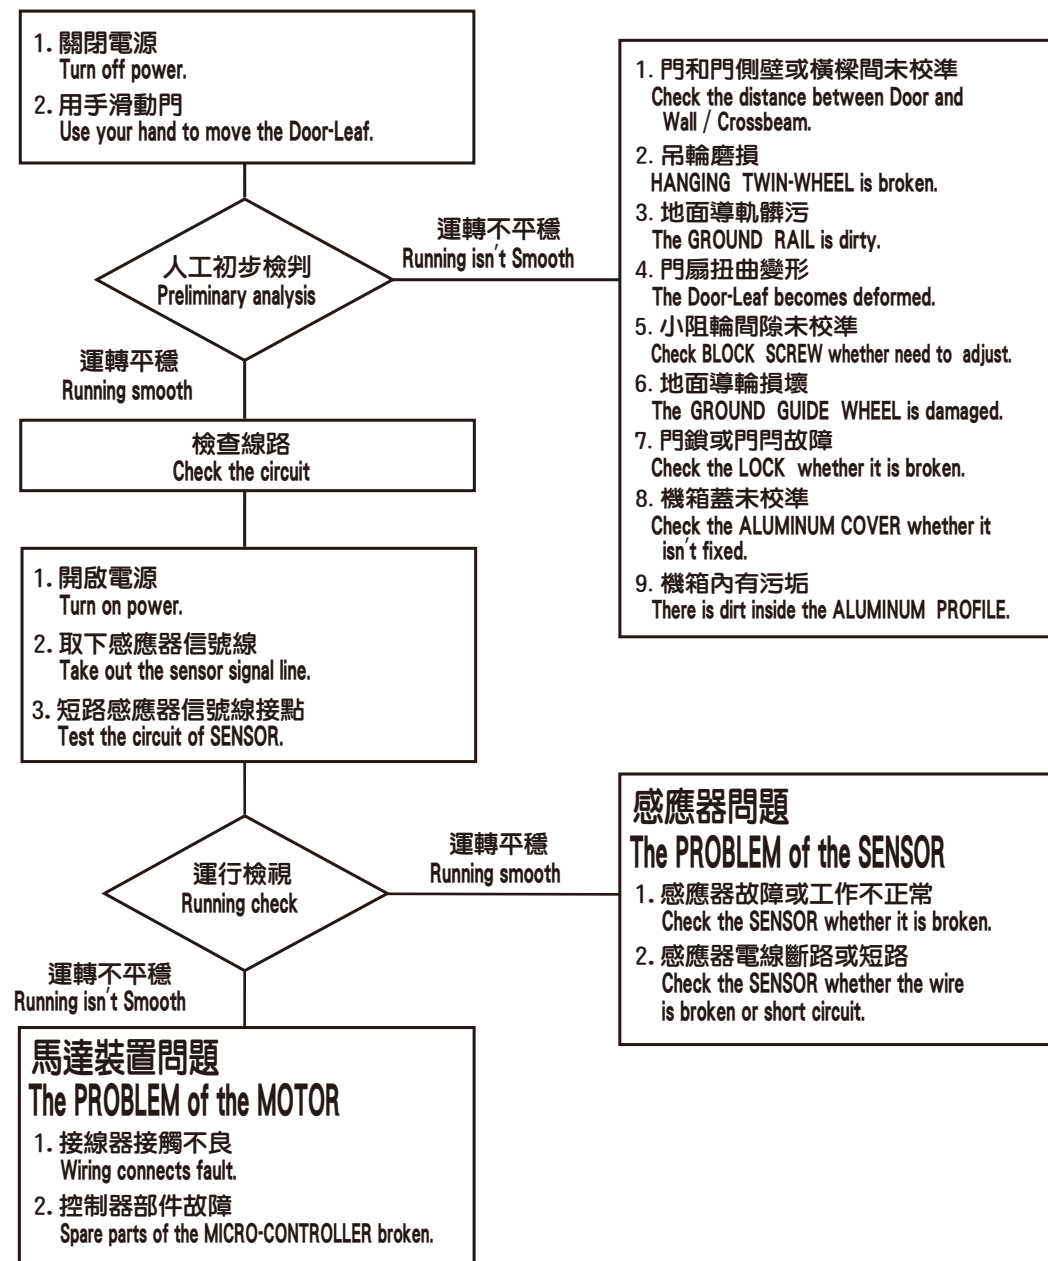

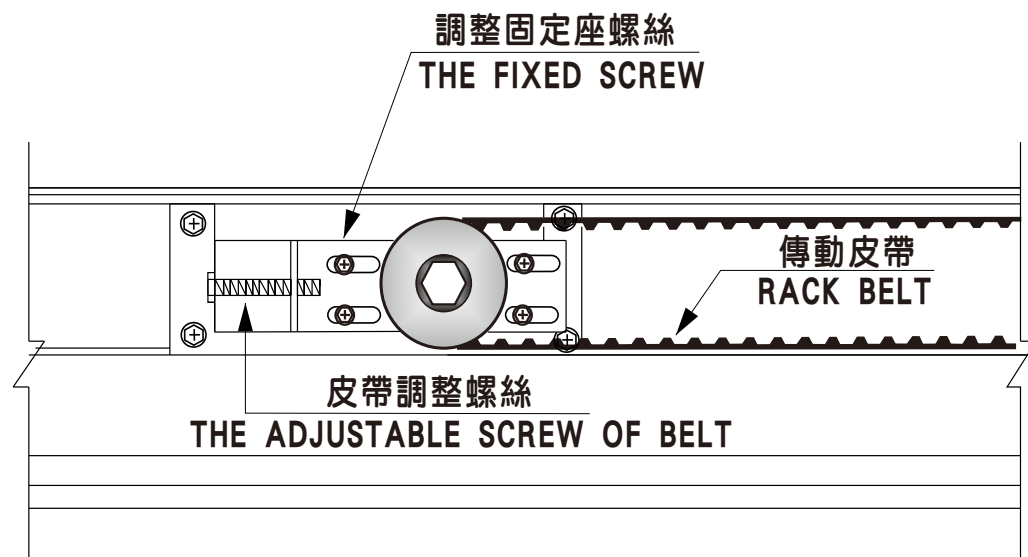

皮帶張力可由皮帶調整螺絲做調整，調整完畢後，須擰緊調整固定座螺絲。

TENSION of BELT can be adjusted by the ADJUSTABLE SCREW of BELT, after that, must tighten the FIXED SCREW of BELT.

- E 關門速度調節旋鈕** The closing speed of the door
可調整門扇關閉時行進速度，數字越大，速度越快。初始調整時，請將數字由小而大，逐次調整。
Adjust the CLOSED SPEED
Higher number, faster speed.
CAUTION: please adjust the number one by one from low to high.
- F 關門慢速距離調節旋鈕** The slowing range of closing door
可調整門扇關閉時慢速距離，數字越大，距離越長。初始調整時，請將數字由大而小，逐次調整。
Adjust the SLOW RANGE of CLOSED DOOR
Higher number, more range about the slow range at open door position.
CAUTION: please adjust the number one by one from high to low.
- G 慢速速度調節旋鈕** The slowing speed of the door
當門扇慢速行進時，可調整慢速速度，數字越大，速度越快。初始調整時，請將數字由小而大，逐次調整。
Adjust the SLOW SPEED
Higher number, faster speed.
CAUTION: please adjust the number one by one from low to high.
- H 開放時間調節旋鈕** Opening hold time
調整門扇開放時間，數字越大，門扇停留時間越長，在最小(0)秒和最大(20)秒之間調整。
Adjust the HOLD OPEN TIME
Higher number, the hold time is longer.

NUMBER	0	1	2	3	4	5	6	7	8	9
SECOND	0	1	2	3	4	5	6	10	32	64

A 半開位置調節旋鈕 Full/Half opening

全開/半開接點ON時，半開功能隨即動作，此時可藉由調節旋鈕設定門扇開啟位置，數字越大，開啟幅度越寬。

Adjust the RANGE of the HALF OPEN DISTANCE.
Higher number, wider range.

B 煞車力調節旋鈕 Brake power

門扇開啟時，其煞車力量可自由調整，門扇較輕時，所需煞車力較小；門扇較重時，所需之煞車力相對較大。可由調節旋鈕調整煞車力至適當大小。當門扇重量小於50kg時，請調於0~2。

The Door-Leaf is slight, the BRAKE POWER is less.
Please choose 0~2 if the Door-Leaf is under 50kg.
Please adjust number from number 5 if the Door-Leaf is over 80kg.

C 開門速度調節旋鈕 The opening speed of the door

可調整門扇開啟時行進速度，數字越大，速度越快。初始調整時，請將數字由小而大，逐次調整。

Adjust the OPEN SPEED
Higher number, faster speed.


CAUTION: please adjust the number one by one from low to high.


D 開門慢速距離調節旋鈕 The slowing range of opening door

可調整門扇開啟時慢速距離，數字越大，距離越長。初始調整時，請將數字由大而小，逐次調整。

Adjust the SLOW RANGE of OPENING DOOR
Higher number, more range about the slow range at open door position.
CAUTION: please adjust the number one by one from high to low.

TELESCOPIC 3-WINGED
SLIDING DOORS
三扇走單向

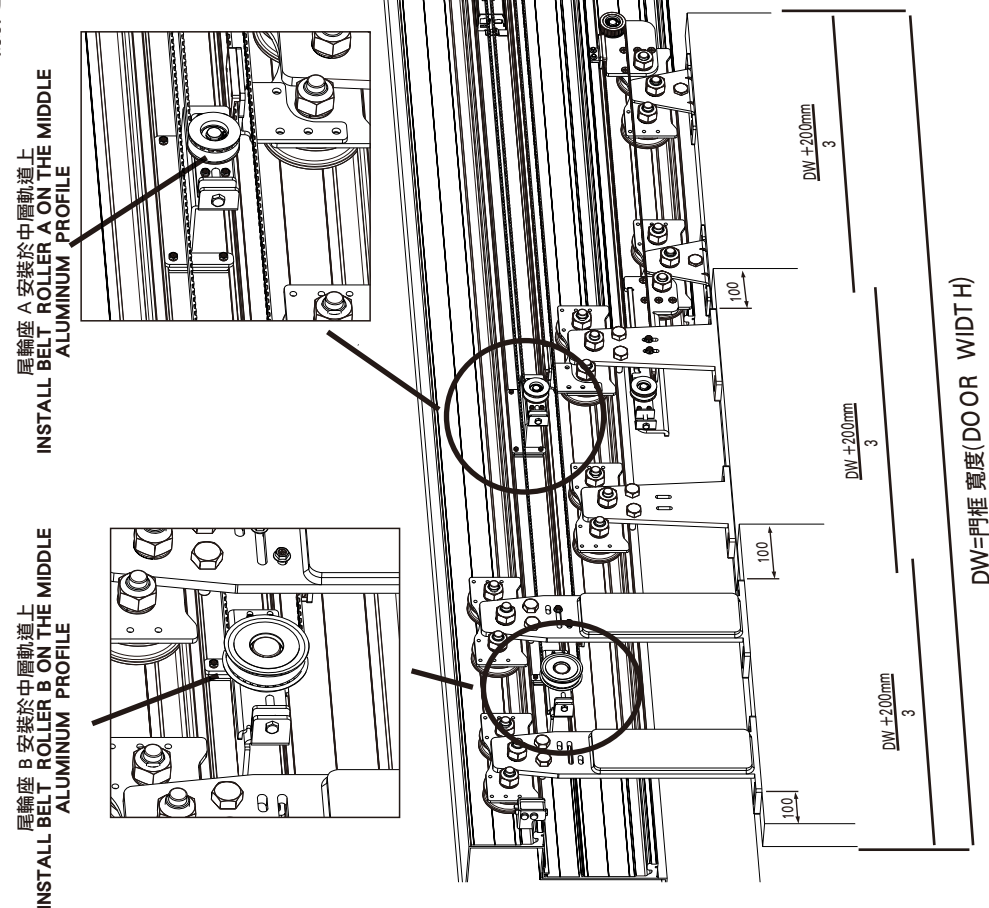

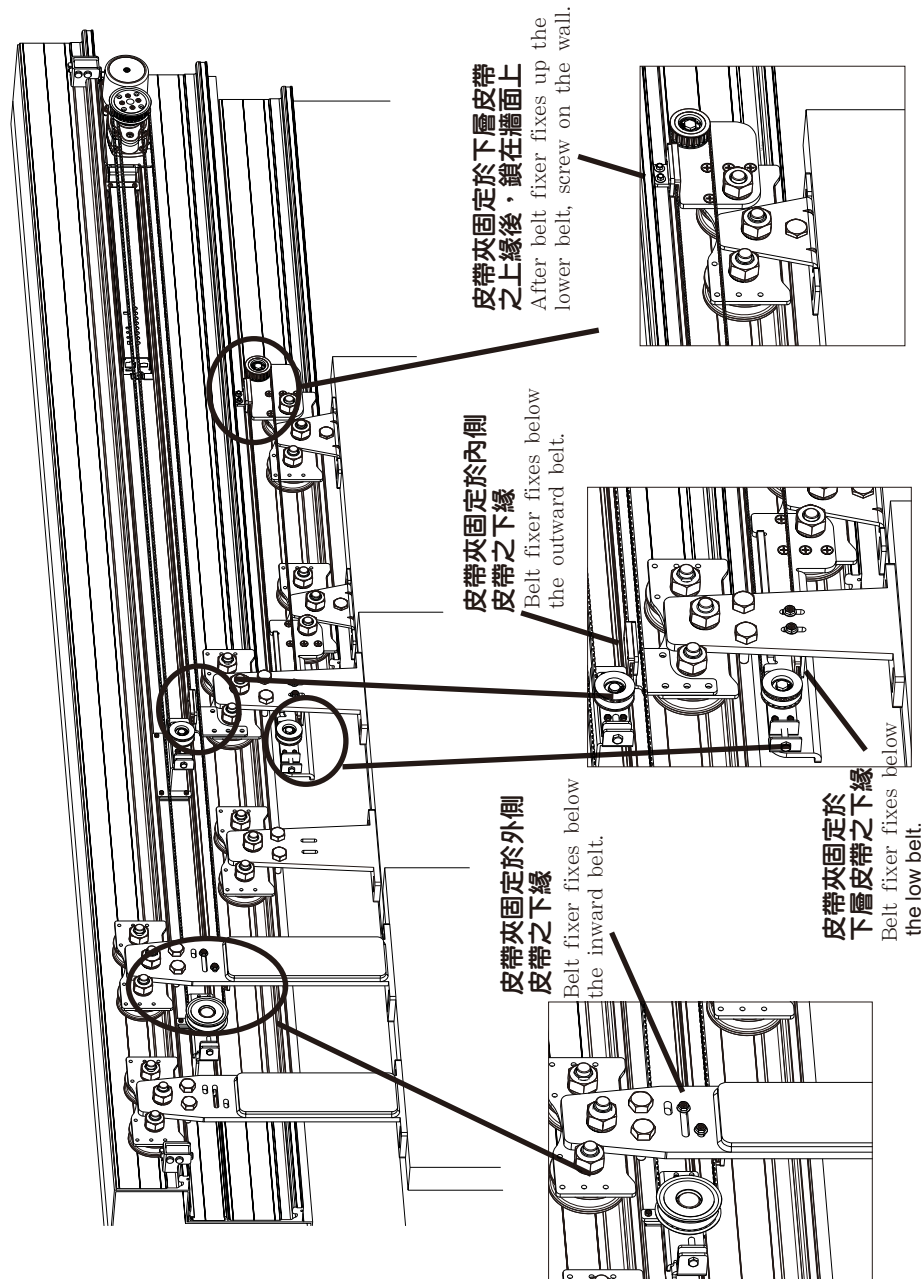

電源開關開啟前，先手動開門和關門，確認門扇能夠平滑移動，並確認電氣連接無誤後，方可供電。


Before turn on the power, make sure the Door-Leaf can be smoothly moved, and the electric link is correct at first.

1.系統行程記憶 SYSTEM PROGRAM REMEMBER

當電源開啟後，控制系統從門的關閉位置至開啟位置低速行進，確認並記憶行程距離，經由內部微電腦處理器自動設定後，門扇開閉位置即予以固定。

After turn on the power, the MICRO-CONTROLLER will remember the distance and the range.

2.調整 ADJUST

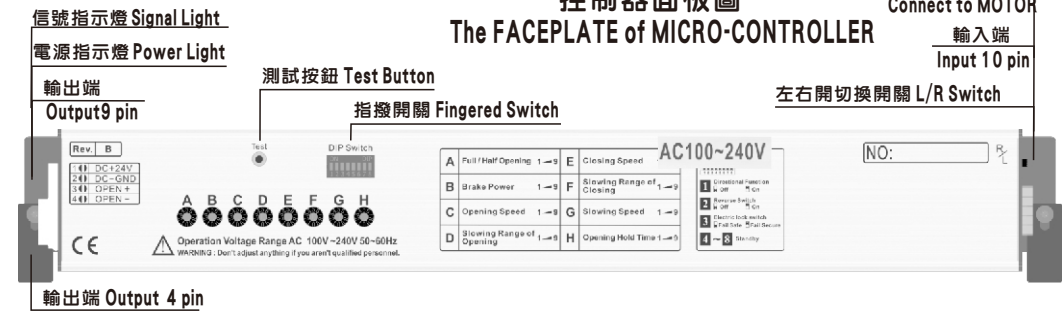

紅色LED-電源指示燈，電源開啟後，LED燈亮，指示電源已接通。

Red LED-Power is connected.

綠色LED-信號指示燈，當開門信號輸入時，LED燈亮，表示信號輸入。

Green LED-Input the open door signal.

L/R-左右開切換開關。

L/R switch-The direction of the door opening: right/left(R/L).

指撥開關-Pin 1 - 定向開關

操作方式
OFF: 正常模式
ON: 系統模式為按一下開門，再按一下關門。

指撥開關-Pin 2-反向開關:為了控制停電再復電後的門扇開關方向。

操作方式
OFF(正常模式): 停電再復電後，門扇先執行開門動作。
ON(適合保全系統): 停電再復電後，門扇先執行關門動作。


Fingered Switch- Pin 1 - Directional Function

Operation
OFF: Normal mode.
ON: push once, open the door. Push again, close the door.

Fingered Switch- Pin 2- Reverse Switch: in order to control opening and closing direction of the Door-Leaf after power resumes.

Operation
OFF: Normal mode, after power resumes, the Door-Leaf opens the door first.
ON: suitable for Security System, after power resumes, the Door-Leaf closes the door first.

集線器接線示意圖
Wiring diagram

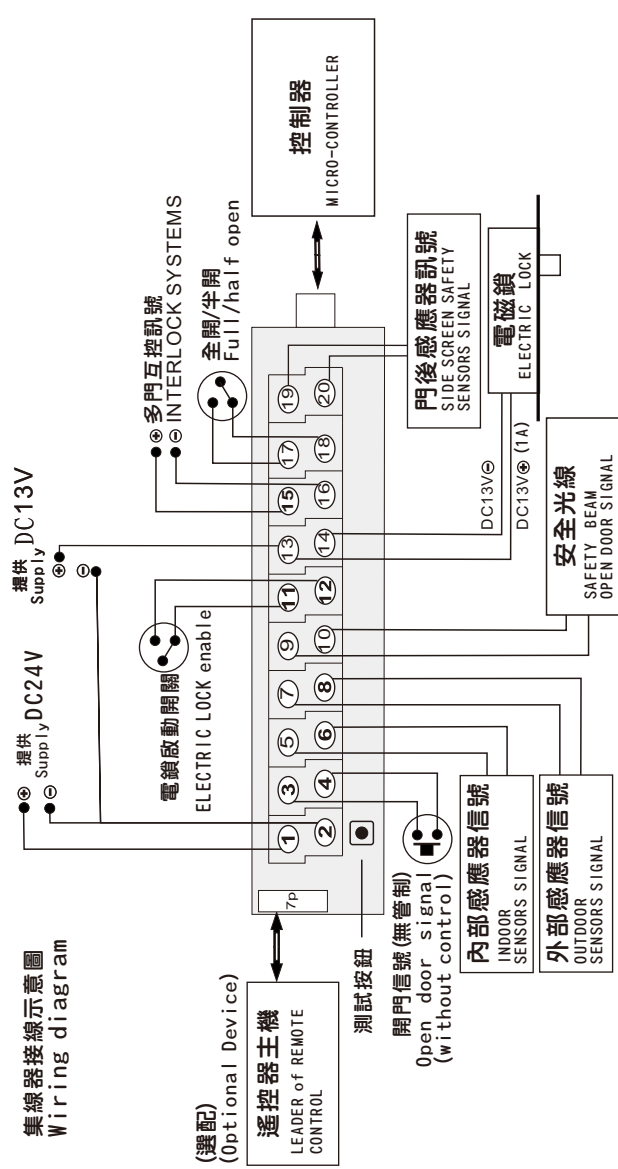

(A) 11號與12號端子短路時，電鎖功能隨之啟動且當門扇關閉後，13號與14號端子輸出 DC13V 供電磁鎖使用。若是 11號與12號端子沒有短路，則13號與14號端子不會輸出 DC13V。


The FUNCTION of the ELECTRIC LOCK will work when ⑪ and ⑫ are short circuit, then ⑬ and ⑭ will output DC13V for ELECTRIC LOCK after the door closes. ⑬ and ⑭ will not output DC13V if ⑪ and ⑫ are not short circuit.

(B) 9號與10號端子做為安全光線信號控制；當門扇開啟或運行當中，9號與10號端子保持在接受信號狀態中，當門扇關閉後則9號與10號端子變成不接收信號，安全光線隨即關閉，保持門鎖。


The SIGNAL of the SAFETY BEAM is controlled by ⑨ and ⑩. When door is opening and running, ⑨ and ⑩ keep to accept the signal, then the SAFETY BEAM will be working. ⑨ and ⑩ will not work when the door is closed, then the SAFETY BEAM will lose efficacy when the door is closed.

(C) 門後感應器是為避免門在開啟時後方有物體或行人進入而發生碰撞其接點訊號於 ⑮，⑯ 二點，當訊號觸發時移動中的門扇會即刻變慢行進，到門完全開啟後以正常速度關閉。


The signal of Side Screen Safety Sensor is controlled by ⑮ and ⑯. Side Screen Safety Sensors are placed at the rear end of the door to prevent collisions during the opening movement of the moving leaves. When the signal activates, the moving leaves will become slowly, till the door opens fully, then close normally.

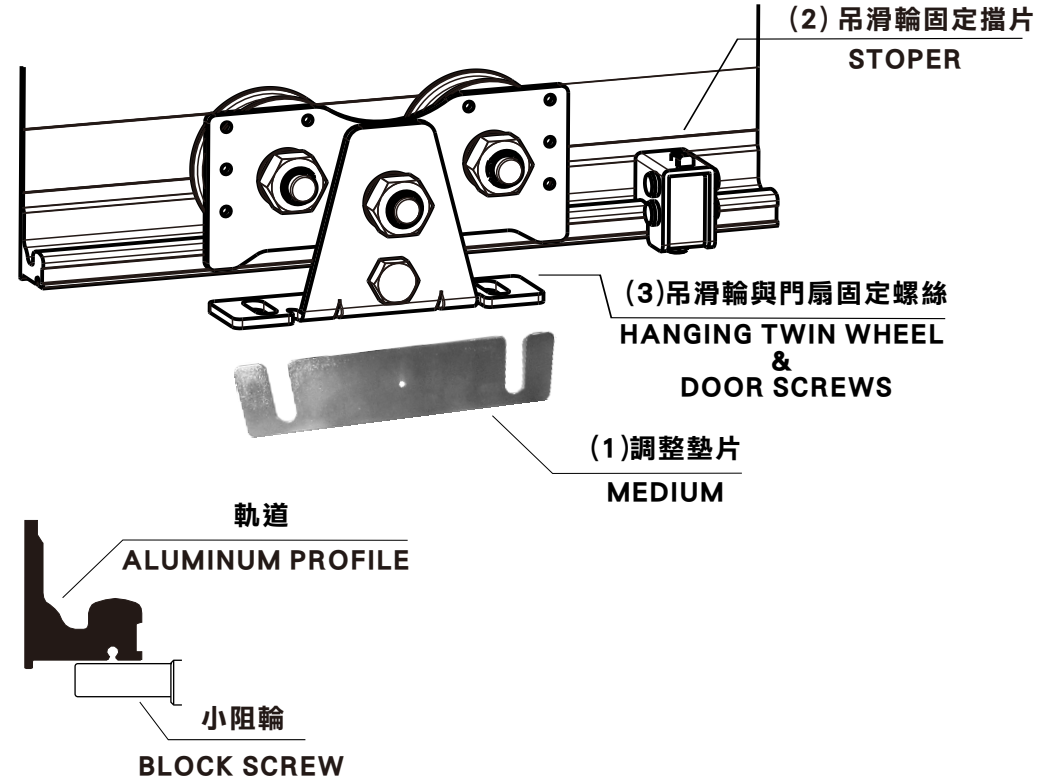

- 當門扇的高度與間隙需調整時，首先鬆開吊滑輪與門扇固定螺絲，將調整墊片放入需要調整的位置。
When Door-Leaf height and interval need to adjust, loose (3) at first, then put (1) to where you need to adjust.
- 調整完畢後，必須擰緊吊滑輪固定螺絲。
Need to fasten (3) after adjust **A**.
- 門扇開關位置確認後，按置吊滑輪固定擋片，確保開門位置不變。
Install above-mentioned (2) after make sure the DOOR OPEN POSITION.

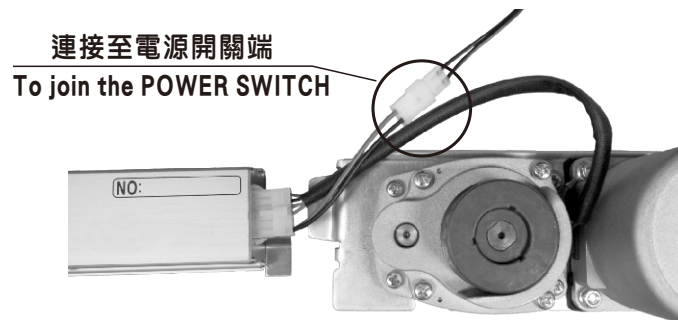

控制器與馬達連接示意圖
The ILLUSTRATED of CONTROLLER and MOTOR.

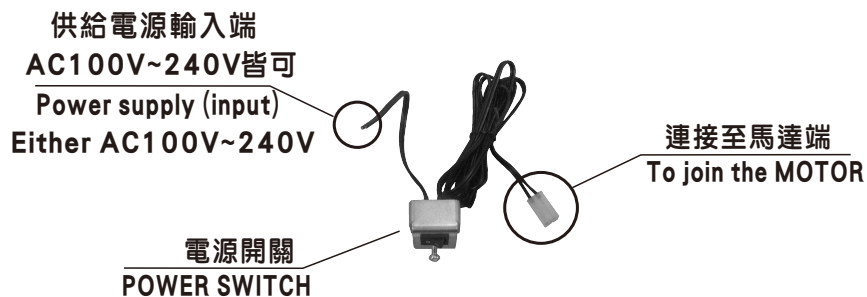


警告 Warning

請確認感應器所標示之電壓是否與供給電源相同，若與供給電源電壓不同時，則感應器需另行加裝變壓裝置否則感應器極易燒毀，連接完畢後，請再確認一次。

Please confirm WHETHER the SENSOR VOLTAGE is the same as the power supply. If different between them, need to add the TRANSFORMER, otherwise the SENSOR would be burned.

微電腦控制器 MICRO-CONTROLLER

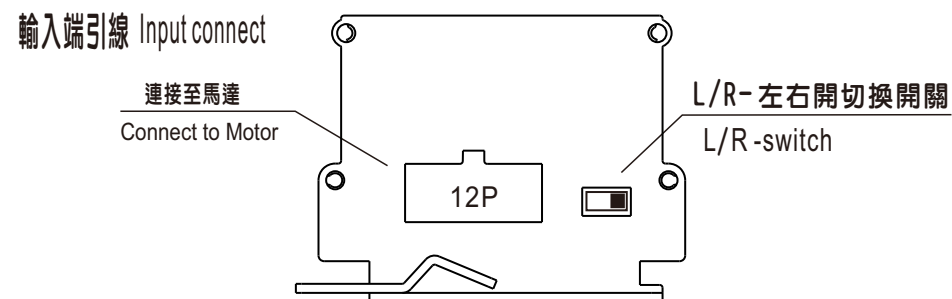

輸出端引線 Output connect

